

A REAL ROOM, A FLEXIBLE APPROACH

Every screen has a job.

Give the wall, the operator and the supervisor the views they need. Combine TetherX browser windows around the way your team works.



Block and AIGuard, Canada. Callouts introduce the viewing roles below.

1 Keep the wider view

Use live cameras and shared presets for the entrances, yards and sites your team watches.

2 See where attention is needed

Keep a real-time map and incoming alerts visible. Show verified alarms or recently closed events in separate views.

3 Work the incident at the desk

Open live or recorded views from related cameras, keep a site preview beside the events, and consult the local instructions.

The controls behind every view.

Shared views, ready for the next shift

Save, duplicate and group presets. Keep entrance cameras in place as other views cycle, so teams return to a familiar arrangement.

Remote control and integration

Change a preset or refresh the viewing browser remotely. A third-party system can select a saved wall through the published API.

Permissions for each viewing position

Give a screen live-only access, restrict permitted cameras and IPs, and revoke its viewing account permissions when access should end.

Check that the picture is current

See camera connection status, picture timestamps and colour-coded stream delay. Red warnings flag frozen or down feeds.

Add screens without extra wall licences.

No per-screen or per-GPU video-wall fee, and no licensed display-count cap. Normal platform, optional service and hardware costs still apply.

TRUSTED BY



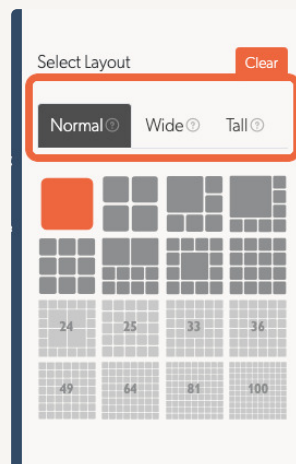
SET UP THE TEAM'S VIEWS

Arrange it once. **Use it every shift.**

ARRANGE**Choose the right layout**

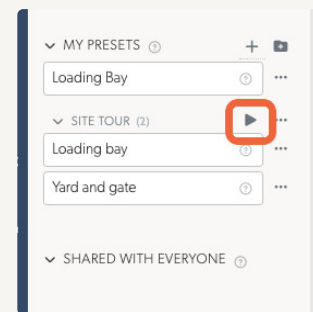
Click a camera name to pick its feed. Drag the grip to swap two cameras, or use Clear to empty the tiles while keeping the layout.

Live View > Live > Select Layout

**SAVE AND CYCLE****Share a view. Build a tour.**

Set a default view for opening Live View. Press 1 to 9 to recall the first nine presets, and choose the tour pace from the group menu.

Live View > Presets > Group play

**Set the pace of your tour**

5, 10, 15 or 30 seconds · 1 or 5 minutes

**INSPECT****Take a closer look**

Expand a camera to fullscreen, zoom digitally or save a snapshot. Picture in Picture keeps a camera visible while you work elsewhere.

**ADJUST****Choose quality camera by camera**

Use Auto, Primary (HQ), Secondary (LQ) or 1fps Preview. Fit shows the whole frame; Fill crops the edges to fill its tile.

**SPEAK****Address the person on site**

Use supported speakers for live talkdown, or send a prepared announcement. Mute individual camera tiles to manage incoming audio.

**OPERATE****Move the camera or its equipment**

Use PTZ and stored camera positions where supported. Available outputs can operate connected relays, lights and wipers.

PLAN YOUR SETUP

Size it for the **job in the room.**

Group screens for remote changes

A preset command reaches the viewing account's connected clients. Use separate accounts for screens that must change independently.

Use the local connection

On the same network, video can stream directly from the TetherBox. Plan the viewing computer and connection for your camera mix.

Set the viewing duration

Choose No limit on the relevant sources when the wall should stay open without inactivity prompts.

The selector includes layouts up to 100 tiles; larger layouts can be added. Spread views across multiple windows and size the simultaneous streams for your viewing hardware, camera quality and network.

WORKS WITH YOUR EXISTING COMPATIBLE CAMERAS



Available controls depend on the model, configuration and permissions.

BRING YOUR CAMERA LIST AND
SCREEN PLAN

Plan your **video wall** with us.

sales@tetherx.io

UK +44 (0)208 099 6260

AU +61 (0)2 7248 6439

US +1 (438) 800 6446

BOOK A WALKTHROUGH

tetherx.io/demo